Fixture must be mounted at least 3' above grade.

Fixture shown in 'UP' position but, may be mounted in either the 'UP' or 'DOWN' position.

Instructions:

- 1) Level and secure the mounting plate to the junction box.
- 2) Water seal the plate to the mounting surface by using caulk around it's edge.
- 3) Mark the locations for the wall anchors. It is helpful to place the backplate over the mounting plate and mark the locations through the holes.
- 4) Drill 5/16" diameter holes at the marked locations and install the wall anchors.
- 5) Remove lamp box cover.
- 6) Level and attach the backplate to the wall with the "Keps" nuts and #14 hex screws as indicated. (Hex screws provided also seal the mounting holes.)
- 7) Make all appropriate wire connections.
- 8) Re-attach lamp box cover and install lamp. (If aimable lamp option, adjust lamp bracket as required)
- 9) Attach housing to backplate.
- 10) Note: 24" & 32" fixtures include a backplate mounted 'hook' (top & bottom). This 'hook' can be used to hang the fixture housing during lamp replacement, or other service.



Milwaukee, WI 414-354-6600 Design Modification Rights Reserved eVisa Lighting 2001

INSTALLATION INSTRUCTIONS: 0W1200 THROUGH 0W1224

Family fixture name: CASCADE

Description: FIXTURE MOUNTING INSTRUCTIONS

Drawing: 760265XX Sheet 1 of 1 Eng: CGA Rev: A

Date drawn: 09-07-00

electrical equipment, basic safety precautions should always be followed, including the following:
instructions corefully before installing and sove for future use, Make sure all connections are in accordance with the National Electrical code and local regulations,
possible electric shock, be sure the power supply is turned off before servicing on installing the future. Service should be performed by qualified personnel,
structions may not cover all details or variations. If additional information is needed please contact Visa Lighting.

of Sheet 1

Drawing: 760265XX