

# INSTALLATION INSTRUCTIONS

Model: **CV**  
Fixture Family: **SLEIGHT**  
Document Description: Installation Instructions for Sleight Series Luminaires

1717 West Civic Drive Milwaukee, WI 53209  
414-354-6600  
Design Modification Rights Reserved  
© Visa Lighting


Drawing: 760842XX

Rev: B

Sheet: 1 of 3

Eng: DAF

Date Drawn: 09/30/2010

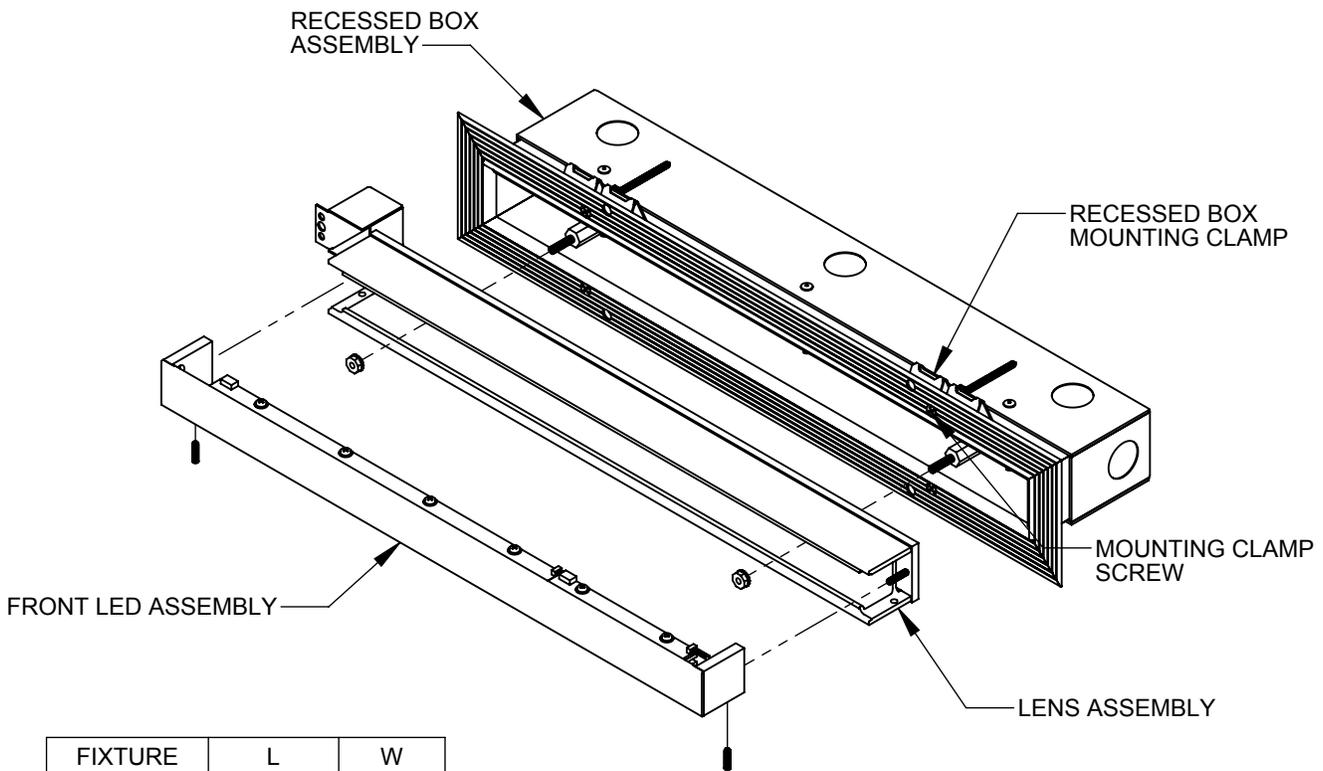

FIXTURE	L	W
16"	16-3/4"	2-1/2"
32"	32-3/4"	2-1/2"

**TYPICAL RECESSED FIXTURE**

**NOTE: THIS FIXTURE & MUDFRAME ARE INTENDED FOR DRYWALL INSTALLATION ONLY. CALL FACTORY FOR TILE OR OTHER APPLICATIONS.**

- 1 Determine mud frame hole size from table above.
- 2 Connect electrical through knockouts in recessed box assembly and pull wires through.
- 3 Slide recessed box assembly into rectangular hole in wall, tighten the mounting clamp screw so bracket collapses tight onto drywall. Note: Make sure box is level before tightening mounting clamp. Recessed box assembly can be mounted into wall using screws and anchors (supplied by others) and removing mounting clamp.
- 4 Recess box cover supplied to protect recessed assembly during installation and mudding process. Discard once installed.
- 5 Make all electrical connections.
- 6 Attach lens assembly to back box and secure with nuts (2).
- 7 Slide front LED assembly onto lens assembly aligning posts into holes in sides of front assembly and secure with set screws (2).




When using electrical equipment, basic safety precautions should always be followed, including the following:

- Read all instructions carefully before installing and save for future use.
- Make sure all connections are in accordance with the National Electrical Code and local regulations.
- To avoid possible electric shock, be sure the power supply is turned off before servicing or installing the fixture.
- Service should be performed by qualified personnel.
- These instructions may not cover all details or variations. If additional information is needed, please contact Visa Lighting.

# INSTALLATION INSTRUCTIONS

Model: **CV**  
 Fixture Family: **SLEIGHT**  
 Document Description: Installation Instructions for  
 Sleight Series Luminaires

1717 West Civic Drive Milwaukee, WI 53209  
 414-354-6600  
 Design Modification Rights Reserved  
 © Visa Lighting

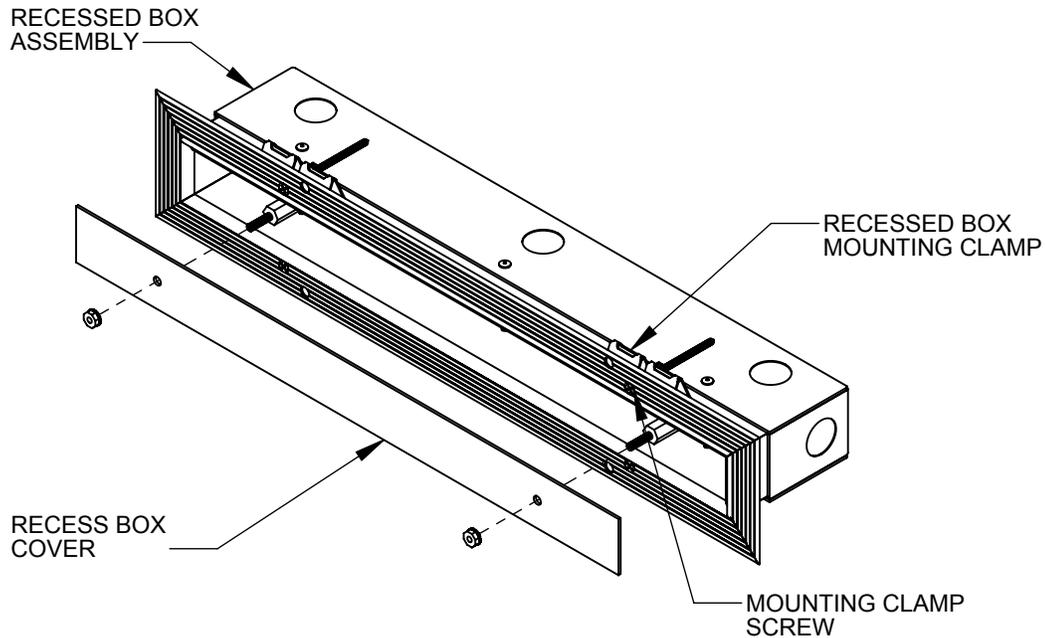

FIXTURE	L	W
16"	16-3/4"	2-1/2"
32"	32-3/4"	2-1/2"

## SHIP AHEAD RECESSED BOX ASSEMBLY

- 1 Determine mud frame hole size from table above.
- 2 Connect electrical through knockouts in recessed box assembly and pull wires through.
- 3 Slide recessed box assembly into rectangular hole in wall, tighten the mounting clamp screw so bracket collapses tight onto drywall. Note: Make sure box is level before tightening mounting clamp. Recessed box assembly can be mounted into wall using screws and anchors (supplied by others) and removing mounting clamp.
- 4 Recess box cover supplied to protect recessed assembly during installation and mudding process. Discard once fixture is installed.



**!** When using electrical equipment, basic safety precautions should always be followed, including the following:

- Read all instructions carefully before installing and save for future use.
- Make sure all connections are in accordance with the National Electrical Code and local regulations.
- To avoid possible electric shock, be sure the power supply is turned off before servicing or installing the fixture.
- Service should be performed by qualified personnel.
- These instructions may not cover all details or variations. If additional information is needed, please contact Visa Lighting.

# INSTALLATION INSTRUCTIONS

Model: **CV**  
Fixture Family: **SLEIGHT**  
Document Description: Installation Instructions for  
Sleight Series Luminaires

1717 West Civic Drive Milwaukee, WI 53209  
414-354-6600  
Design Modification Rights Reserved  
© Visa Lighting

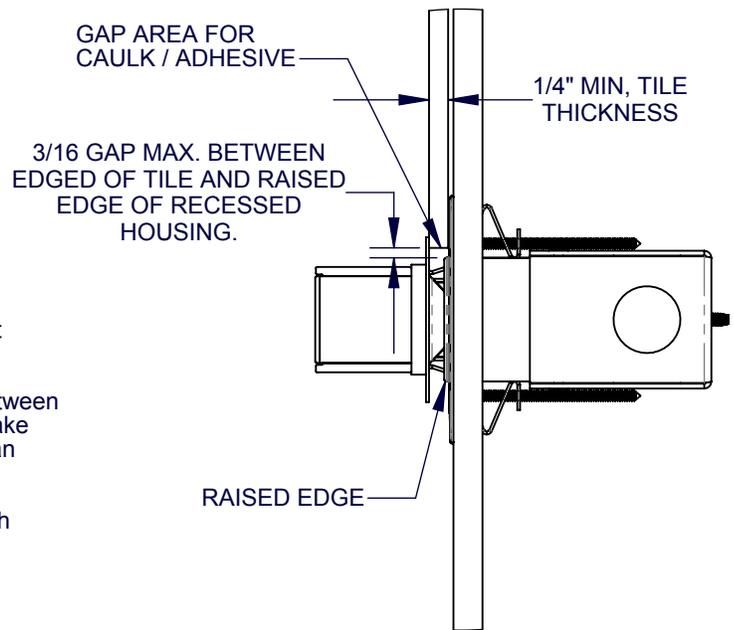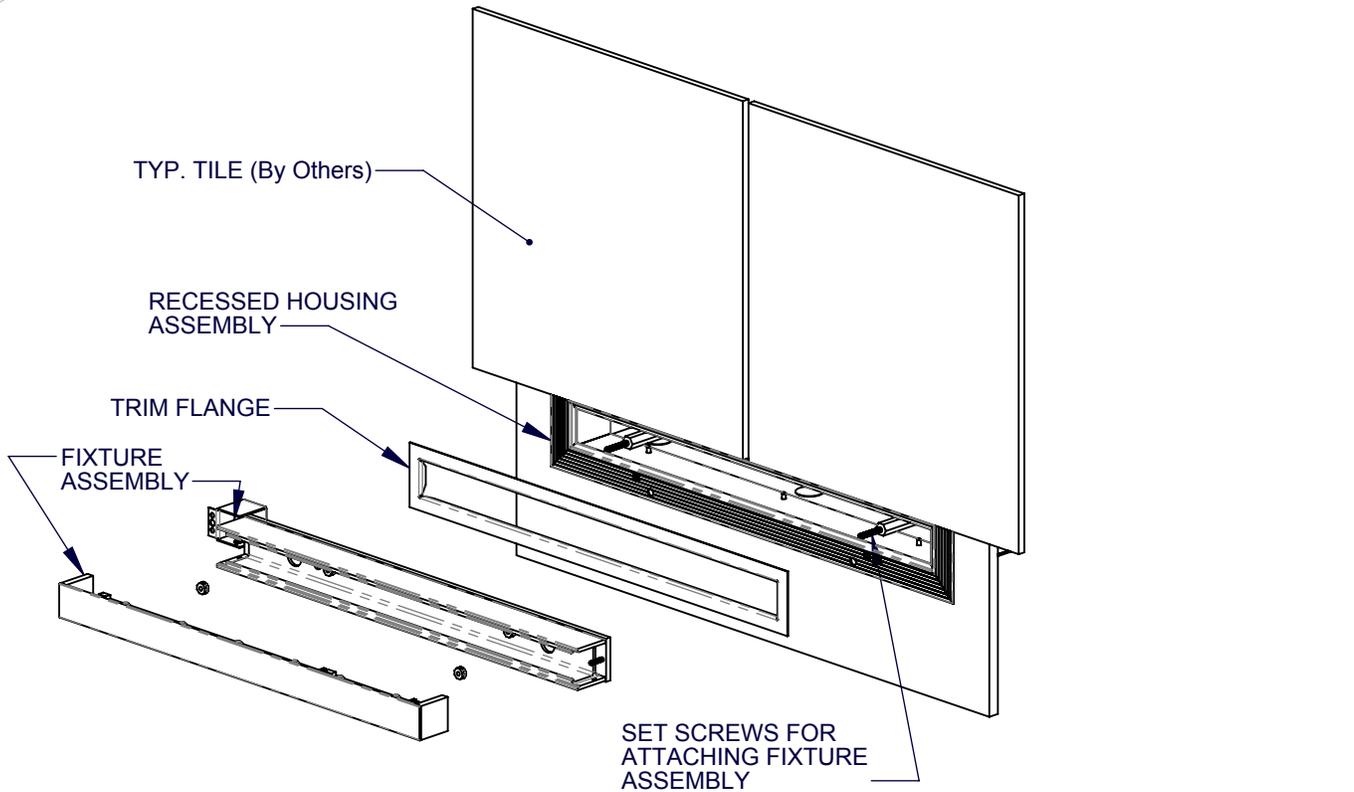

## FLANGE INSTALLATION INSTRUCTIONS

1. Install recessed housing assembly into wall per Sleight installation instructions illustrated on previous sheets.
2. Apply caulk / adhesive along edge of tile in the gap between raised edge of recessed housing assembly and tile. Make sure caulk is slightly above face of tile so trim flange can adhere.
3. Slide TRIM FLANGE over back of fixture assembly with inner bends facing recessed housing.
4. Note: Use longer set screws (Supplied by Visa) to accommodate tile thickness.
5. Install fixture assembly per Sleight installation instructions. Note: Center trim flange around fixture assembly, fasten Fixture Assembly and allow caulk / adhesive to dry.

1.

Drawing: 760842XX

Rev: B

Sheet: 3 of 3

Eng: DAF

Date Drawn: 09/30/2010

**!** When using electrical equipment, basic safety precautions should always be followed, including the following:

- Read all instructions carefully before installing and save for future use.
- Make sure all connections are in accordance with the National Electrical Code and local regulations.
- To avoid possible electric shock, be sure the power supply is turned off before servicing or installing the fixture.
- Service should be performed by qualified personnel.
- These instructions may not cover all details or variations. If additional information is needed, please contact Visa Lighting.