OW2400, OW2402 Model: Fixture Family: SASS OUTDOOR SCONCE Document Description: Installation Instructions for Sass Series Luminaires

1717 West Civic Drive Milwaukee, WI 53209 414-354-6600 Design Modification Rights Reserved

© Visa Lighting

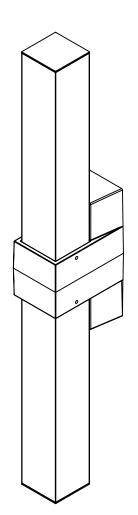


TABLE OF CONTENTS:

SHEET 2: MULLION SYSTEM INSTALLATION

SHEET 3: REMOTE DRIVER BOX INSTALLTION

SHEET 4: SEALING INSTRUCTIONS (EXTERIOR INSTALLATION)

SHEET 5: 2 X 4 EXTERIOR JUNCTION BOX WITH TRANSITION PLATE INSTALLATION

SHEET 6: 2 X 4 JUNCTION BOX INSTALLATION

SHEET 7: 4 X 4 EXTERIOR JUNCTION BOX WITH TRANSITION PLATE INSTALLATION (WITH JUNCTION BOX COVER OPTION)

SHEET 8: ALTERNATE JUNCTION BOX INSTALLATION (WITH JUNCTION BOX COVER OPTION)

When using electrical equipment, basic safety precautions should always be followed, including the following:

Read all instructions carefully before installing and save for future use.
Make sure all connections are in accordance with the National Electrical Code and local regulations.
To avoid possible electric shock, be sure the power supply is turned off before servicing or installing the fixture
Sorvice should be performed by qualified personal.


• Service should be performed by qualified personnel.

• These instructions may not cover all details or variations. If additional information is needed, please contact Visa Lighting.

OW2400, OW2402 Model: SASS OUTDOOR SCONCE Fixture Family: Document Description: Installation Instructions for

Sass Series Luminaires

1717 West Civic Drive Milwaukee, WI 53209 414-354-6600 Design Modification Rights Reserved © Visa Lighting

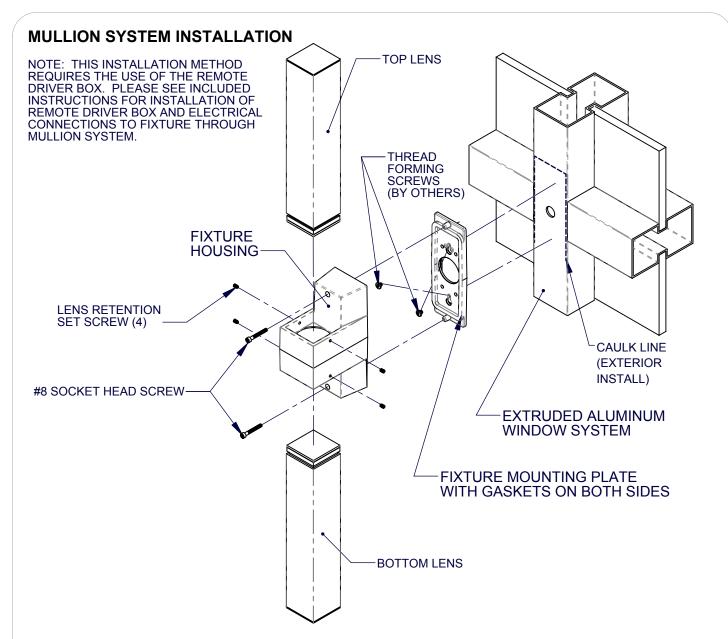

Important: Exterior installation requires caulk along perimeter of housing (or J-Box Cover). SEE SHEET 4.

- Loosen lens retention set screws at side of housing.
- Slide top and bottom lenses out from housing.
- 3. Loosen #8 socket head screws at front of wire splice box.
- 4.
- Remove fixture mounting plate.

 Secure fixture mounting plate to aluminum mullion system with thread forming screws (by others).

 Make electrical connections per code. (See Remote Driver Box Installation sheet 3) 5.
- 6.
- Being careful not to pinch wires, resecure fixture housing to mounting plate with socket head screws at the front of the wire splice box. NOTE: For proper seal, mounting plate must NOT be visible from side views. Tighten #8 socket head screws until mounting plate is not visible.
- Reinstall top and bottom lenses and tighten lens retention set screws at side of housing or extruded aluminum mullion seams run behind mounting plate.

- When using electrical equipment, basic safety precautions should always be followed, including the following:

 Read all instructions carefully before installing and save for future use.

 Make sure all connections are in accordance with the National Electrical Code and local regulations.

 To avoid possible electric shock, be sure the power supply is turned off before servicing or installing the fixture

 Service should be performed by qualified personnel.
- These instructions may not cover all details or variations. If additional information is needed, please contact Visa Lighting.

Sheet: 2 of

Eng:


Drawing: **762024XX**

OW2400, OW2402 Model: Fixture Family: SASS OUTDOOR SCONCE Document Description: Installation Instructions for Sass Series Luminaires

1717 West Civic Drive Milwaukee, WI 53209 414-354-6600 Design Modification Rights Reserved © Visa Lighting

INSTRUCTIONS

- 1. Remove Cover by removing the (4) Cover Screws
- Mount Remote Box in an accessible area per local and national codes, use 2. fasteners appropriate for the mounting surface (not included)
- 3. Make line voltage connections in Line voltage Compartment
- Make remaining class II output connections in the main compartment 4.

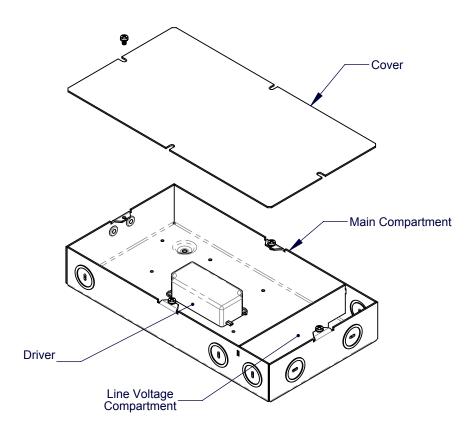

When using electrical equipment, basic safety precautions should always be followed, including the following:

• Read all instructions carefully before installing and save for future use.

• Make sure all connections are in accordance with the National Electrical Code and local regulations.

• To avoid possible electric shock, be sure the power supply is turned off before servicing or installing the fixture

• Service should be performed by qualified personnel.

• These instructions may not cover all details or variations. If additional information is needed, please contact Visa Lighting.

Drawing: **762024XX**

Sheet: 3 of 8


Eng:

Date Drawn: 05/12/15

OW2400, OW2402 Model:

1717 West Civic Drive Milwaukee, WI 53209 414-354-6600 Design Modification Rights Reserved © Visa Lighting



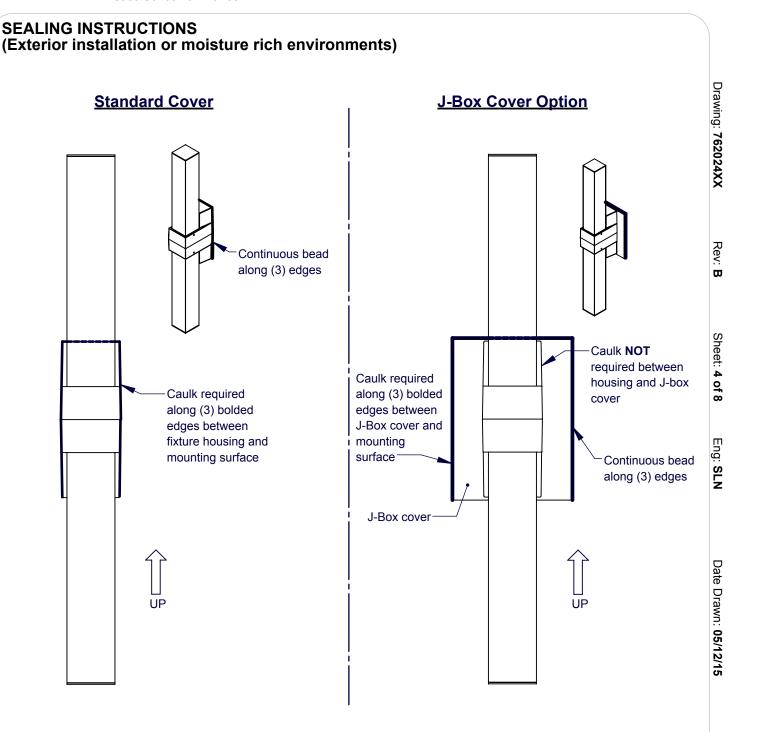

IMPORTANT: Caulk must be applied to a clean and dry surface. All surfaces must be free of debris and residue to ensure a watertight seal. Faulty or missing caulk will cause electronic failure.

When using electrical equipment, basic safety precautions should always be followed, including the following:

When using electrical equipment, basic safety precautions should always be followed, including the following.
Read all instructions carefully before installing and save for future use.
Make sure all connections are in accordance with the National Electrical Code and local regulations.
To avoid possible electric shock, be sure the power supply is turned off before servicing or installing the fixture
Service should be performed by qualified personnel.
Those instructions may not expect all details are varieties. If additional information is peeded, places contact V.


• These instructions may not cover all details or variations. If additional information is needed, please contact Visa Lighting.

OW2400, OW2402 Model: Fixture Family: SASS OUTDOOR SCONCE Document Description: Installation Instructions for

Sass Series Luminaires



1717 West Civic Drive Milwaukee, WI 53209 414-354-6600 Design Modification Rights Reserved © Visa Lighting

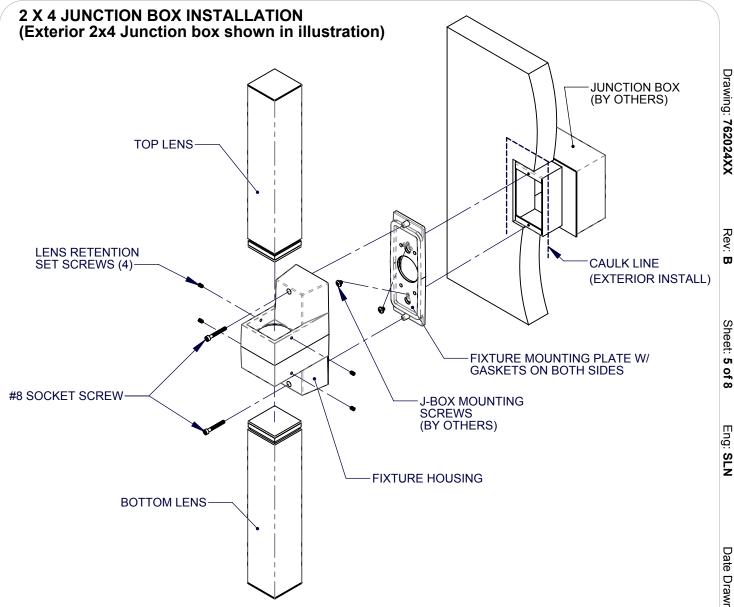

Important: Exterior installation requires caulk along perimeter of housing (or J-Box Cover). SEE SHEET 4.

- Loosen lens retention set screws at side of housing.
- Slide top and bottom lenses out from housing.
- 2. Loosen #8 set screws at front of wire splice box.
- 4. Remove fixture mounting plate.
- 5. Secure fixture mounting plate to junction box at wall with screws (by others).
- 6. Make electrical connections per code.
- Being careful not to pinch wires, resecure fixture housing to mounting plate by tightening the provided #8 socket screws at the front of the wire splice box. NOTE: For proper seal, mounting plate must NOT be visible from side views. Tighten #8 socket head screws until mounting plate is not visible.
- Reinstall top and bottom lenses and tighten lens retention set screws at side of housing 8.

- When using electrical equipment, basic safety precautions should always be followed, including the following:

 Read all instructions carefully before installing and save for future use.

 Make sure all connections are in accordance with the National Electrical Code and local regulations.

 To avoid possible electric shock, be sure the power supply is turned off before servicing or installing the fixture

 Service should be performed by qualified personnel.

 These instructions may not cover all details or variations. If additional information is needed, please contact Visa Lighting.

OW2400, OW2402 Model: Fixture Family: SASS OUTDOOR SCONCE Document Description: Installation Instructions for

Sass Series Luminaires



2 X 4 JUNCTION BOX INSTALLATION Drawing: **762024XX MOUNTING TOP LENS SURFACE** JUNCTION BOX (BY OTHERS) LENS RETENTION SET SCREWS (4) SILICONE LINE (EXTERIOR INSTALL) FIXTURE MOUNTING PLATE W/ Sheet: 6 of 8 **GASKETS ON BOTH SIDES** #8 SOCKET HEAD SCREW (2) J-BOX MOUNTING SCREWS (BY OTHERS) **SET SCREW** (4) PLCS Eng: FIXTURE HOUSING **BOTTOM LENS** Date Drawn: 05/12/15

Important: Exterior installation requires caulk along perimeter of housing (or J-Box Cover). SEE SHEET 4.

- Loosen lens retention set screws at side of housing.
- 2. Slide top and bottom lenses out from housing.
- Loosen #8 socket head screws at top and bottom of wire splice box. 3.
- 4.
- Remove fixture mounting plate.
 Secure fixture mounting plate to junction box at wall with J-Box mounting screws (by others). 5.
- Make electrical connections per code.
- Being careful not to pinch wires, resecure fixture housing to mounting plate with #8 socket head screws at the front of the wire splice box. NOTE: For proper seal, mounting plate must NOT be visible from side views. Tighten set screws until mounting plate is not visible.

- When using electrical equipment, basic safety precautions should always be followed, including the following:

 Read all instructions carefully before installing and save for future use.

 Make sure all connections are in accordance with the National Electrical Code and local regulations.

 To avoid possible electric shock, be sure the power supply is turned off before servicing or installing the fixture

 Service should be performed by qualified personnel.


 These instructions may not cover all details or variations. If additional information is needed, please contact Visa Lighting.

OW2400, OW2402 Model: Fixture Family:

SASS OUTDOOR SCONCE Document Description: Installation Instructions for

Sass Series Luminaires

1717 West Civic Drive Milwaukee, WI 53209 414-354-6600 Design Modification Rights Reserved © Visa Lighting

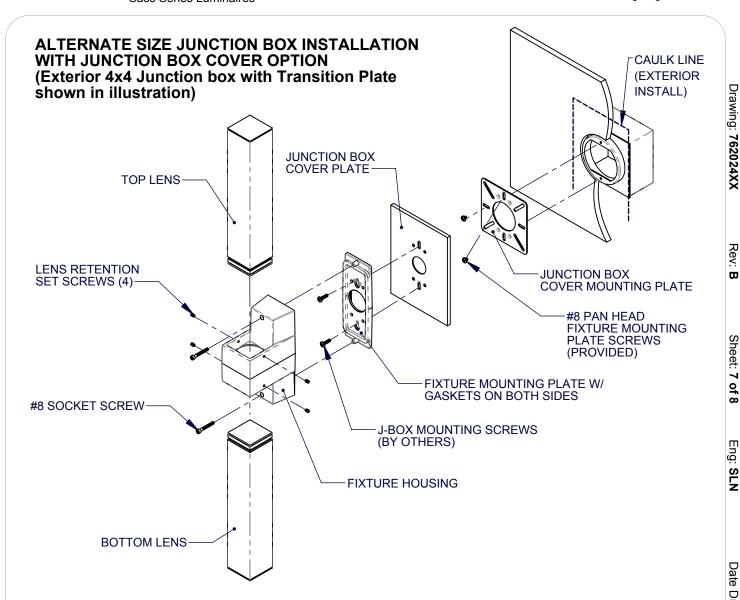

Important: Exterior installation requires caulk along perimeter of housing (or J-Box Cover). SEE SHEET 4.

- Loosen lens retention set screws at side of housing.
- Slide top and bottom lenses out from housing.
- 2. 3.
- Loosen #8 socket head screws at top and bottom of housing.
 Remove fixture mounting plate, junction box cover plate and junction box cover mounting plate assembly. 4.
- Loosen and remove provided #8 pan head fixture mounting plate screws (set to the side for reassembly later). Secure junction box cover mounting plate to junction box with screws (by others). 5.
- 6. NOTE: Verify bracket is level for fixture straightness once fixture is installed.
- Using the provided #8 pan head fixture mounting plate screws (set to the side earlier), secure the fixture mounting plate 7. and the junction box cover plate to the junction box cover mounting plate now attached to the junction box. The Junction box cover plate's 1/4" thick gasket will face the wall.
- Make electrical connections per code. 8.
- Being careful not to pinch wires, resecure fixture housing to mounting plate by tightening the provided #8 set screws at the top and bottom of the wire splice box. NOTE: For proper seal, mounting plate must NOT be visible from side views. Tighten set screws until mounting plate is not visible.

When using electrical equipment, basic safety precautions should always be followed, including the following:


- Read all instructions carefully before installing and save for future use.
 Make sure all connections are in accordance with the National Electrical Code and local regulations.
 To avoid possible electric shock, be sure the power supply is turned off before servicing or installing the fixture
 Service should be performed by qualified personnel.
 Those instructions may not ever all details or varieties. If additional information is pooded, places contact V
- These instructions may not cover all details or variations. If additional information is needed, please contact Visa Lighting.

Sheet: 7 of 8

OW2400, OW2402 Model: Fixture Family: SASS OUTDOOR SCONCE

Document Description: Installation Instructions for Sass Series Luminaires

1717 West Civic Drive Milwaukee, WI 53209 414-354-6600 Design Modification Rights Reserved © Visa Lighting

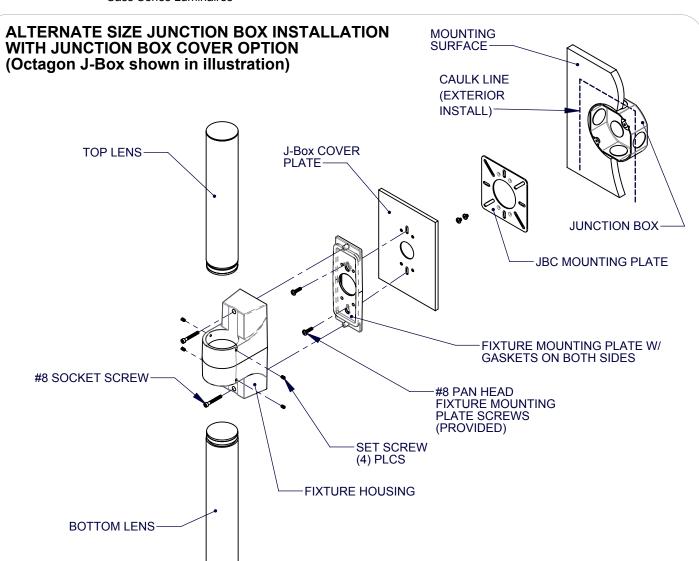

Important: Exterior installation requires caulk along perimeter of housing (or J-Box Cover). SEE SHEET 4.

- Loosen lens retention set screws at side of housing.
- Slide top and bottom lenses out from housing. 2. 3. 4.
- Loosen #8 socket head screws at top and bottom of housing.

 Remove fixture mounting plate, junction box cover plate and junction box cover mounting plate assembly.
- 5. Loosen and remove provided #8 pan head fixture mounting plate screws (set to the side for reassembly later).
- Secure junction box cover mounting plate to junction box with screws (by others).

NOTE: Verify bracket is level for fixture straightness once fixture is installed.

- 7. Using the provided #8 pan head fixture mounting plate screws (set to the side earlier), secure the fixture mounting plate and the junction box cover plate to the junction box cover mounting plate now attached to the junction box. The Junction box cover plate's 1/4" thick gasket will face the wall.
- Make electrical connections per code.
- Being careful not to pinch wires, resecure fixture housing to mounting plate by tightening the provided #8 set screws at the top and bottom of the wire splice box. NOTE: For proper seal, mounting plate must NOT be visible from side views. Tighten set screws until mounting plate is not visible.

When using electrical equipment, basic safety precautions should always be followed, including the following:

- Read all instructions carefully before installing and save for future use.
 Make sure all connections are in accordance with the National Electrical Code and local regulations.
 To avoid possible electric shock, be sure the power supply is turned off before servicing or installing the fixture
 Service should be performed by qualified personnel.
 Those instructions may not ever all details or varieties. If additional information is pooded, places contact V
- These instructions may not cover all details or variations. If additional information is needed, please contact Visa Lighting.

Drawing: **762024XX**

Sheet: 8 of 8

Eng: