


INSTALLATION INSTRUCTIONS

Model: **REPOSE**
Fixture Family: **CEILING MOUNT**
Document Description: Installation Instructions for
CM1950

VISA LIGHTING
AN OLDENBURG GROUP COMPANY
1717 West Civic Drive Milwaukee, WI 53209
414-354-6600
Design Modification Rights Reserved
© Visa Lighting 2016

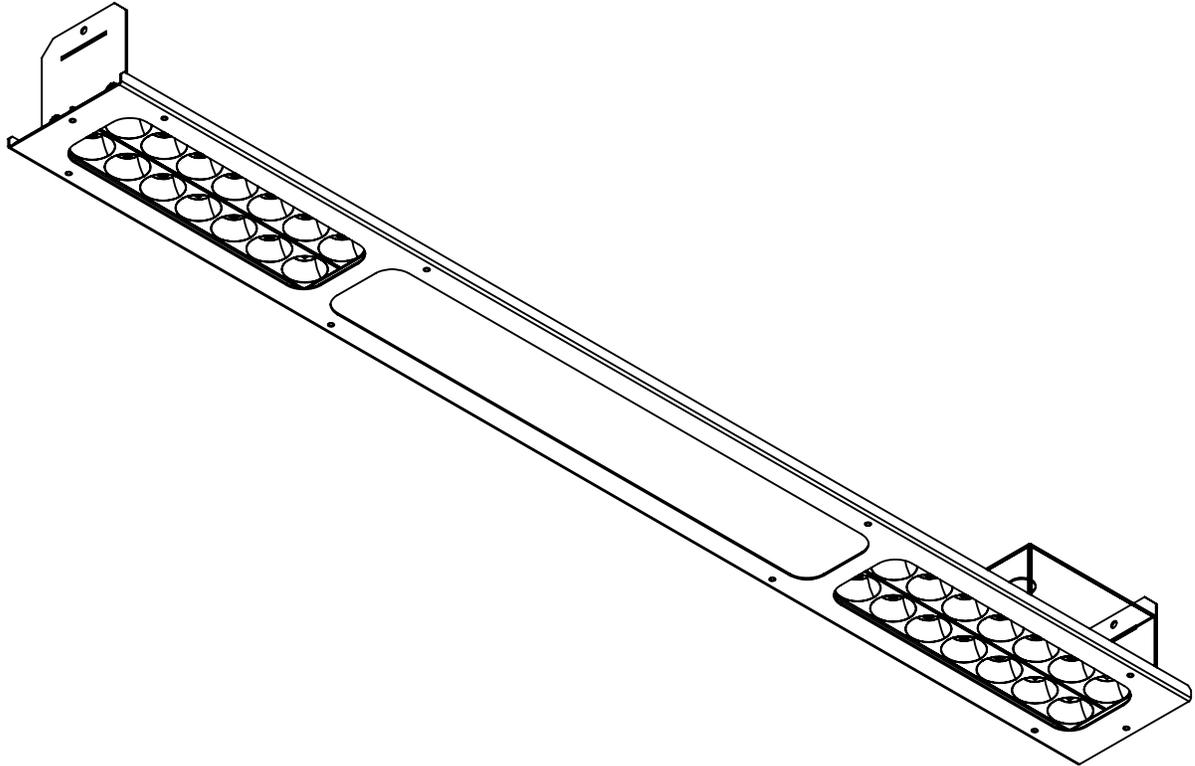

REPOSE **PATIENT ROOM OVERBED** **CM1950**

Drawing: 762390XX

Rev: A

Sheet: 1 of 4

Eng: TDG

Date Drawn: 10/07/2025

! When using electrical equipment, basic safety precautions should always be followed, including the following:

- Read all instructions carefully before installing and save for future use.
- Make sure all connections are in accordance with the National Electrical Code and local regulations.
- To avoid possible electric shock, be sure the power supply is turned off before servicing or installing the fixture.
- Service should be performed by qualified personnel.
- These instructions may not cover all details or variations. If additional information is needed, please contact Visa Lighting.

INSTALLATION INSTRUCTIONS




Model: **REPOSE**
Fixture Family: **CEILING MOUNT**
Document Description: Installation Instructions for
CM1950

1717 West Civic Drive Milwaukee, WI 53209
414-354-6600
Design Modification Rights Reserved
© Visa Lighting 2016

*OPTIONAL

FIXTURE WIRING

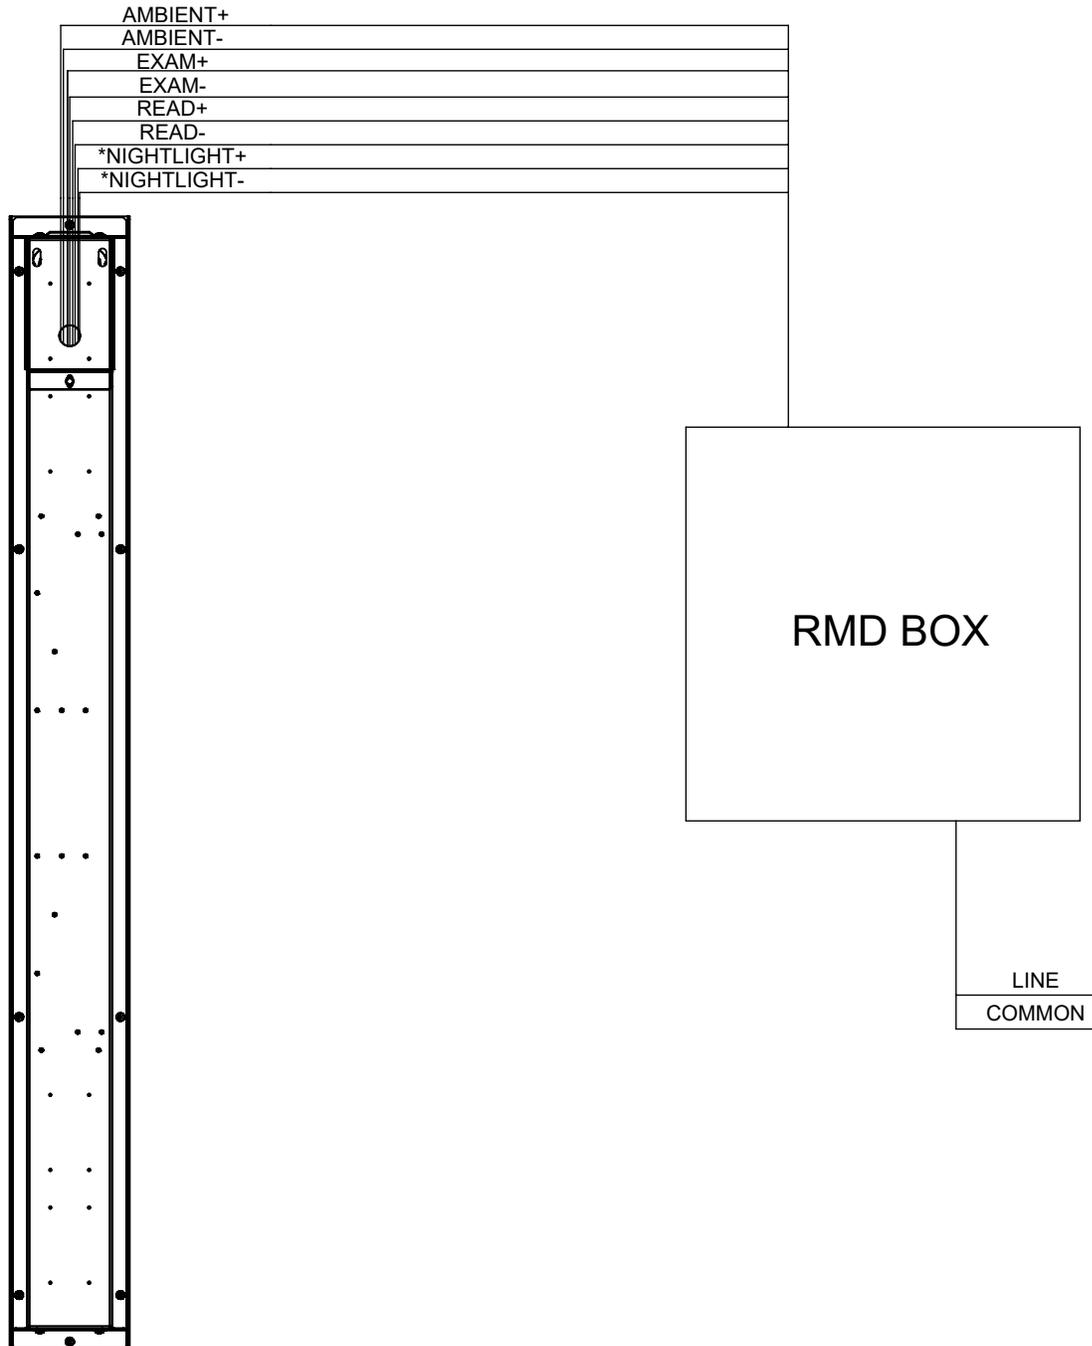

Drawing: 762390XX

Rev: A

Sheet: 2 of 4

Eng: TDG

Date Drawn: 10/07/2025



When using electrical equipment, basic safety precautions should always be followed, including the following:


- Read all instructions carefully before installing and save for future use.
- Make sure all connections are in accordance with the National Electrical Code and local regulations.
- To avoid possible electric shock, be sure the power supply is turned off before servicing or installing the fixture.
- Service should be performed by qualified personnel.
- These instructions may not cover all details or variations. If additional information is needed, please contact Visa Lighting.

INSTALLATION INSTRUCTIONS



Model: **REPOSE**
Fixture Family: **CEILING MOUNT**
Document Description: Installation Instructions for
CM1950

1717 West Civic Drive Milwaukee, WI 53209
414-354-6600
Design Modification Rights Reserved
© Visa Lighting 2016

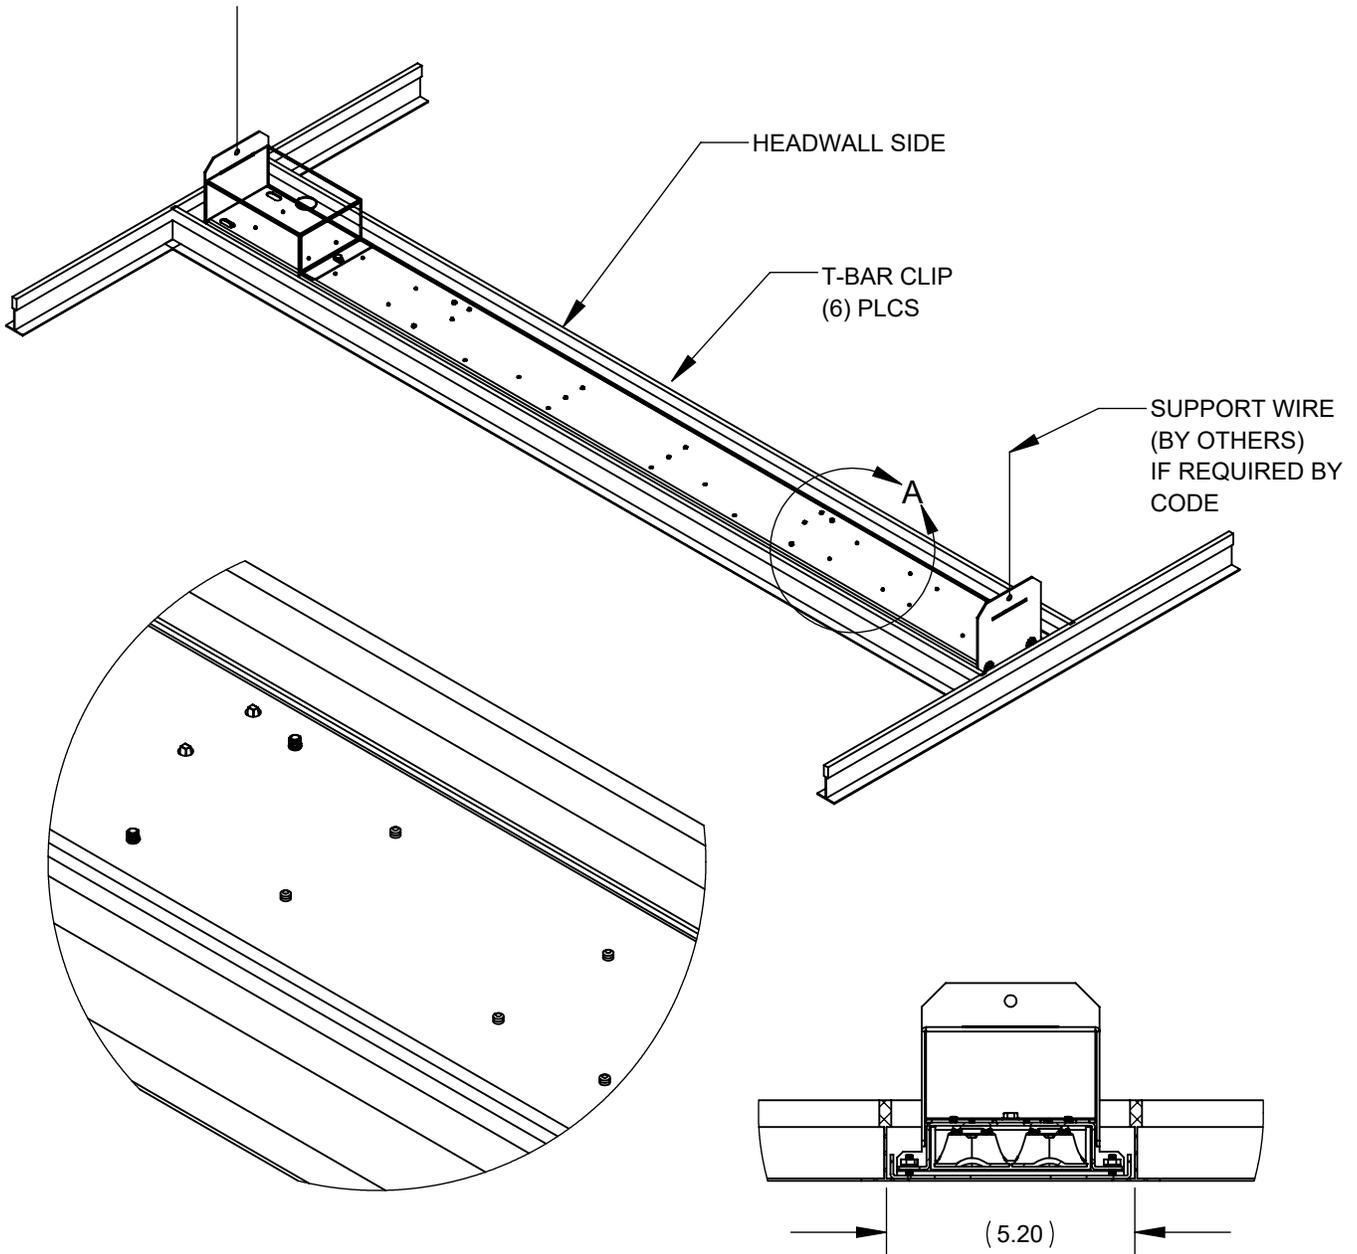

1. T-GRID BARS ARE BASED ON STANDARD 24 X 48 INCH SPACING
2. AFTER GRID INSTALL, USE PROVIDED T-BAR CLIPS TO SECURE FIXTURE TO GRID MEMBERS.
3. ATTACH SUPPORT WIRING TO THE BUILDING AND FIXTURE IF NECESSARY.

Drawing: 762390XX

Rev: A

Sheet: 3 of 4

Eng: TDG

Date Drawn: 10/07/2025



When using electrical equipment, basic safety precautions should always be followed, including the following:

- Read all instructions carefully before installing and save for future use.
- Make sure all connections are in accordance with the National Electrical Code and local regulations.
- To avoid possible electric shock, be sure the power supply is turned off before servicing or installing the fixture
- Service should be performed by qualified personnel.
- These instructions may not cover all details or variations. If additional information is needed, please contact Visa Lighting.

INSTALLATION INSTRUCTIONS



Model: **REPOSE**
Fixture Family: **CEILING MOUNT**
Document Description: Installation Instructions for
CM1950

1717 West Civic Drive Milwaukee, WI 53209
414-354-6600
Design Modification Rights Reserved
© Visa Lighting 2016

Drawing: 762390XX

Rev: A

Sheet: 4 of 4


Eng: TDG

Date Drawn: 10/07/2025

RMD WIRING

CONNECTING THE LOW VOLTAGE FIXTURE HOUSING WIRES TO DRIVER BOX

1. MOUNT THE DRIVER BOX IN A LOCATION ACCESSIBLE FOR FUTURE MAINTENANCE. DRIVER BOX CAN BE INSTALLED IN PATIENT ROOM CEILING PLENUM OR ELSEWHERE IN THE FACILITY WITHIN MAXIMUM REMOTE DISTANCE.
2. CONNECTION WIRING AND FLEXIBLE CONDUIT BETWEEN DRIVER BOX AND FIXTURE BY OTHERS.
3. MATCH THE WIRES BETWEEN THE TERMINAL BLOCKS INSIDE THE DRIVER BOX AND TO THE WIRES COMING OUT OF THE BACK OF THE FIXTURE. THE DRIVER BOX HAS LABELS NEXT TO THE TERMINAL BLOCKS SHOWING WHERE CONNECTIONS BELONG.

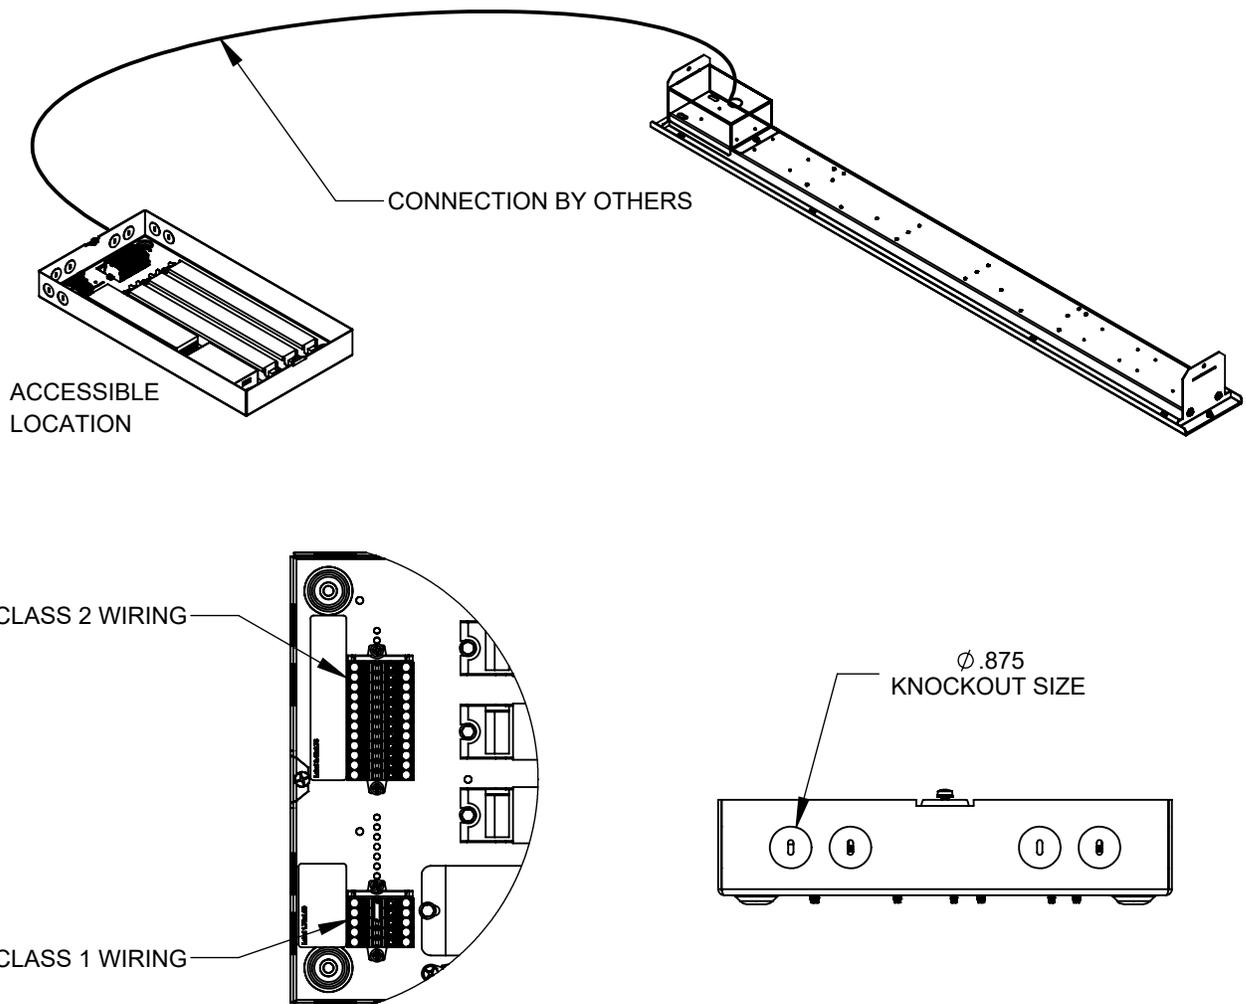

When using electrical equipment, basic safety precautions should always be followed, including the following:

- Read all instructions carefully before installing and save for future use.
- Make sure all connections are in accordance with the National Electrical Code and local regulations.
- To avoid possible electric shock, be sure the power supply is turned off before servicing or installing the fixture.
- Service should be performed by qualified personnel.
- These instructions may not cover all details or variations. If additional information is needed, please contact Visa Lighting.